

MOULDINGS



MOULDINGS

RUN-UP/ RISER BLOCKS


Our Run-up blocks are designed to clip fit. They are also engineered with sturdy side-walls which gives additional strength - a must in PAS001/BS7950 security tests where they work as anti-lift devices. Our blocks have passed these tests with several different PVCu systems. The design also includes a unique 'reverse ramp' - so windows open as smoothly as they close and even a detail so that drainage is not impeded.





Part No.	Description	Variant	Colour	Box Qty	System
RUBMWMKI	Run Up Block	MKI	Mid White	1000	Rehau 70mm, Rehau 60mm, Deceuninck 1800, Deceuninck 2800 Deceuninck/Status 3000 (Zendow), Deceuninck 2500, Wymar, Kommerling 70, Selecta 70
RUBBWMKI	Run Up Block	MKI	Bright White	1000	
RUBBMKI	Run Up Block	MKI	Brown	1000	
RUBTMKI	Run Up Block	MKI	Tan	1000	
VKARUBW	Run Up Block	VK1	Mid White	1000	Veka 70mm
VKARUBV	Run Up Block	VK1	Brown	1000	
VKARUBT	Run Up Block	VK1	Tan	1000	
VKARUBW2	Run Up Block	VK2	Mid White	1000	Veka 70mm Sculptured
VKARUBB2	Run Up Block	VK2	Brown	1000	
VKARUBT2	Run Up Block	VK2	Tan	1000	
DFXRUBW	Run Up Block	DFX	Duraflex White	1000	Duraflex 65mm + 70mm
DFXRUBBLK	Run Up Block	DFX	Black	1000	
ALURUBW	Run Up Block	EL	Mid White	1000	Eurologic Plastmo 70 (ScrewFix)
ALURUBB	Run Up Block	EL	Brown	1000	
ALURUBT	Run Up Block	EL	Tan	1000	

HOW DO THEY FIT?

REHAU S706

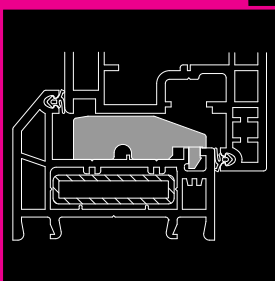

WHERE DO I USE RUN-UP BLOCKS?

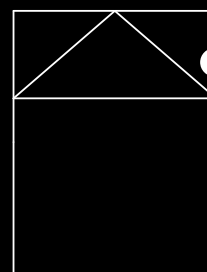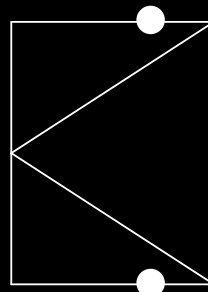

● Oppose throw of espag

● Fit Run-Up Blocks Here

FOR BRIDGE PACKERS SEE PAGE 96

MOULDINGS

LOCKING/CLOSING WEDGES


Locking Wedges pull in bowing sashes and will improve the weather performance of any window. We offer a range of locking wedges to work with solutions for both 13mm and 17mm friction stay stack heights. The Egress variant is specifically designed for use with egress friction stays.



PART NO.	DESCRIPTION	STACK HEIGHT	COLOUR	BOX QTY
LMMW	Standard Locking Wedge	17mm	White	1000
LWB	Standard Locking Wedge	17mm	Brown	1000
LWT	Standard Locking Wedge	17mm	Tan	1000
LMMW13	Standard Locking Wedge	13mm	White	1000
LWB13	Standard Locking Wedge	13mm	Brown	1000
LWT13	Standard Locking Wedge	13mm </td <td>Tan</td> <td>1000</td>	Tan	1000
LMMWEGRESS17	Egress Locking Wedge	17mm	White	1000
LWBEGRESS17	Egress Locking Wedge	17mm	Brown	1000
LWTEGRESS17	Egress Locking Wedge	17mm	Tan	1000
LMMWEGRESS13	Egress Locking Wedge	13mm	White	1000
LWBEGRESS13	Egress Locking Wedge	13mm	Brown	1000
LWTEGRESS13	Egress Locking Wedge	13mm	Tan	1000


HOW DO THEY FIT?

LW146 (17mm White Locking Wedge
Drawn in Rehau S706 Assembly)

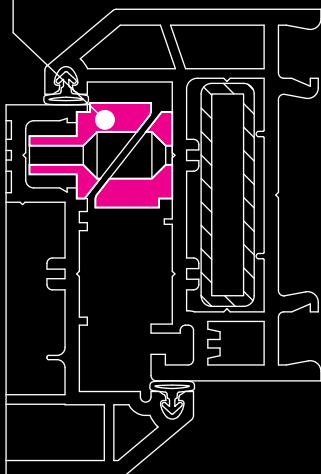

Egress Version available
for use with Egress Hinges

WHERE DO I USE LOCKING WEDGES?

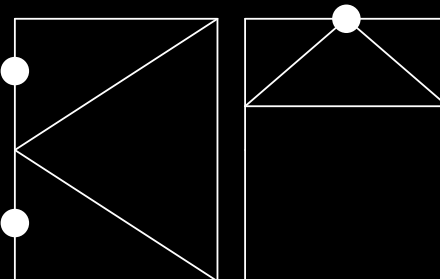


● Fit Locking/Closing Wedges Here

13mm or 17mm?

Fit Male Part to Sash

Fit Female Part to Frame

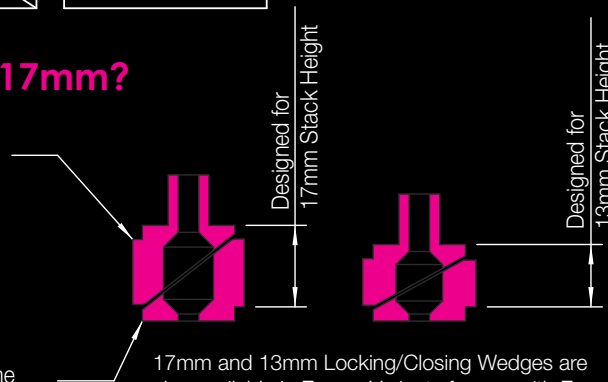

17mm and 13mm Locking/Closing Wedges are also available in Egress Variants for use with Egress Hinges. (They have a shallower locking angle because of hinge geometry). We recommend you call for samples to trial with your hinge type.